

"V" Packing Kit (LS108-LS108HD Clutch Rotating Joint, 4 pieces, <i>leather</i>)	PX176
"V" Packing Kit (LS108-LS108HD Clutch Rotating Joint, 6 pieces, <i>rubber</i>)	PX177
Adjuncting Nut (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1202
Adjusting Nut & Bolt (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C299
Air Valve (LS98B-LS98LC-LS108B-LS108HD Accumulator Assembly)	JC2601
Arm Brake Lining (LS108)	1A169
Arm Brake (LS108-LS108HD)	PX195
Back-up washer (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	PX309
Balance (LS98B-LS98LC-LS108B-LS108HD Toogle Lever Assembly)	JC1617
Band Support (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F92
Band w/Lining (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	1D756
Band w/Lining (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	1D757
Band w/Lining (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F78
Band w/Lining (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F72
Bar (LS98B-LS98LC-LS108B Take-up Roller, 1/2")	1A1114
Bar (LS98B-LS98LC-LS108B Take-up Roller, 5/8")	1A1115
Bar (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1313
Bar (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1345
Bearing (LS78 Conical Roller, <i>cone</i> 39590)	39590-
Bearing (LS78 Conical Roller, <i>cone</i> 3984)	3984-
Bearing (LS78 Conical Roller, <i>cup</i> 3920)	3920-
Bearing (LS78 Conical Roller, <i>cup</i> 39520)	39520-
Bearing (LS78 Primary Shaft 150X70X35)	1X2064
Bearing (LS78 Vertical Travel Shaft, <i>lower part</i> TIM592A)	1X2071
Bearing (LS78 Vertical Travel Shaft, <i>lower part</i> TIM594)	1X1615
Bearing (LS78 Vertical Travel Shaft, <i>lower part</i> TIM77375)	1X2073
Bearing (LS78 Vertical Travel Shaft, <i>lower part</i> TIM77675)	1X2072
Bearing (LS98B-LS98LC-LS108B-LS108HD Boom Brake Lining)	1B1616
Bearing (LS98B-LS98LC-LS108B-LS108HD Boom Brake Lining)	1B2016
Bearing (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double, 71,44X46,04)	1X2825
Bearing (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1X1467
Bearing (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1X1980
Bearing (LS98B-LS98LC-LS108B-LS108HD Tread Sprocket Unit)	91A116
Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	4G17
Bearing (LS98B-LS98LC-LS108B-LS108HD)	1X3446
Bearing (LS98B-LS98LC-LS108B-LS108HD)	8F117
Bearing (LS78 Swing Brake Shaft)	8F139
Bearing (LS78 Swing Shaft, <i>lower part</i>)	1F125
Bearing (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F125
Bearing (LS98B-LS98LC-LS108B-LS108HD Independent Swing Brake Shaft, <i>lower part</i>)	1F125
Bearing (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft, lower part)	8F364
Bearing (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	4C230
Bearing (LS98B-LS98LC-LS108B-LS108HD Swing Shaft & Independent,180x100x46, upper part)	4C230
Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft, upper part, 190x90x64)	4G17
Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Shaft, conical pinion)	8F117

Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft, lower part, 190x90x43)	1F126
Bearing (LS78 Bell Clutch 130X83X22)	1X2063
Bearing (LS98B-LS98LC-LS108B-LS108HD)	1X1555
Bearing (LS78, 125X70X24)	1X2065
Bearing (LS98B-LS98LC-LS108B-LS108HD, 130x75x31)	AC1315
Bearing (LS78 Swing Shaft, <i>upper part</i> , 6215Z150x85x28)	GC225
Bearing (LS78 Vertical Travel Shaft, <i>upper part</i>)	1X2306
Bearing (LS78 Swing Brake Shaft)	1X1980
Bearing (LS78 Reserve Shaft Assembly)	1X1555
Bearing (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	1X1555
Bearing (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Shaft)	1X1555
Bearing (LS98B-LS98LC-LS108B-LS108HD Rear & Front Drum Shaft)	1X1981
Bearing (LS98B-LS98LC-LS108B-LS108HD Supporto campana)	1X1555
Bearing (LS78, 150X85X28)	GC225
Bearing (LS78 Swift Shaft, upper part)	GC225
Bearing (LS78 Vertical Travel Shaft, <i>upper part</i>)	1X1976
Bearing (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1X1976
Bearing (LS98B-LS98LC-LS108B-LS108HD Swing Shaft & Independent Swing Shaft 180x100x46)	1X1977
Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft, central)	GR7
Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft, upper part)	1X1978
Bearing (LS98B-LS98LC-LS108B-LS108HD Primary Shaft)	1X1467
Bearing (LS98B-LS98LC-LS108B-LS108HD Primary Shaft)	1X1980
Bearing (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	1X1981
Bearing (LS98B-LS98LC-LS108B-LS108HD winch support)	1X1981
Bearing (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft, lower part, 190x90x43)	1X1982
Bearing Adaptor (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F95
Bearing Cone (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double, 71,44X46,04)	1X2827
Bearing Cup (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double, 136,53X36,51)	1x2826
Bearing Cup (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double, 140X30,16)	1X2828
Bearing Plate (LS98B-LS98LC-LS108B-LS108HD Tread Sprocket Unit)	1A1297
Bell Clutch (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C180
Bolt (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Brake)	1E103-
Bolt (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B714
Bolt (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B232
Bolt (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	8D74
Bolt (LS98B-LS98LC-LS108B-LS108HD Front and Rear Drum Shaft)	1C17
Bolt (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F81
Bolt (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	8A146
Bolt (LS98B-LS98LC-LS108B-LS108HD Track Carrier Roller)	1X380
Bolt (LS98B-LS98LC-LS108B Tread Sprocket Unit)	98A3508A
Bracket (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B1095
Bracket (LS98B-LS98LC-LS108B-LS108HD Swing Brake Control)	1J635
Bracket (LS98B-LS98LC-LS108B Swing Brake)	8F303

Brake band w/Lining (LS98B-LS98LC-LS108B-LS108HD, lower part , Boom Hoist Brake)	1E227-
Brake band w/Lining (LS98B-LS98LC-LS108B-LS108HD, upper part , Boom Hoist Brake)	1E225-
Brake Drum (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1D10
Brake Drum (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1D10
Brake Drum (LS98B-LS98LC-LS108B Traction Shaft)	1A1363
Brake Lining (LS108HD)	PX383
Bushing (LS118 Sealed Lower Track Roller)	1A1542
Bushing (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C277
Bushing (LS98B-LS98LC-LS108B Sealed Lower Track Roller)	1A1542
Bushing (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1A157
Bushing (LS98B-LS98LC-LS108B Traction Shaft)	1A15
Bushing (LS98B-LS98LC-LS108B Traction Shaft)	1A19
Bushing (LS98B-LS98LC-LS108B Traction Shaft)	1A20
Bushing (LS98B-LS98LC-LS108B Traction Shaft)	1A1480
Bushing (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1G3
Bushing (LS98B-LS98LC-LS108B Tread Sprocket Unit)	91A117
Bushing (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1301
Bushing (LS98B-LS98LC-LS108B Vertical Center Drive Shaft)	1A644
Bushing (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G3
Bushing (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G8
Bushing Conical Couple (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1G37
Capscrew (LS98B-LS98LC-LS108B-LS108HD Sealed Lower Track Roller)	1X2314
Capscrew (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1X559
Capscrew (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1X554
Capscrew (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1X2154
Capstan Brake (LS 108-LS108HD)	PX383
Chain (LS108-LS108HD – Link Belt 60/4 ¾, Regina ASA 60/4, Giunto, Falsa)	18H44
Chain (LS78 – Link Belt Asa 60/3, Regina Asa 60/3, Falsa, Giunto)	RO60-3
Chain (LS108-LS108HD – Link Belt RO2010, Tsubaky RO25H, Regina R514)	RO2510
Chain (LS78 – Link Belt RO2512, Regina AX1568, Tsubaky RO568)	RO2512
Chain (LS318 – Link Belt RO3618)	RO80-4
Chain (LS98B-LS98LC-LS108B-LS108HD Quadruple Chain , Reduction Shaft)	RO60/4
Chain Sprocket (LS98B-LS98LC-LS108B-LS108HD Tread Sprocket Unit)	1A1291
Check Valve (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC4254
Clutch Cylinder (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	22C16
Clutch Drum (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C16
Clutch Lining (LS78)	PX253
Clutch Lining LS (108HD)	PX418
Concal Roller (LS98, cone , 568 73,82x36,17)	1X1577
Concal Roller (LS98, cup , 563 125x28,58)	1X1578
Conical Roller (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B1042
Conical Roller (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B676
Control Arm (LS98B-LS98LC-LS108B-LS108HD Swing Lock)	1J1432
Control Valve Assy. (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1J775
Control Valve Assy. (LS98B-LS98LC-LS108B-LS108HD Swing Brake Control)	1J623

Coupling (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G28
Cover (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1444
Cover (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A4844
Cover Plate (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F94
Cylinder (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	22C16
Cylinder (LS78 Swing Brake)	8F298
Cylinder (LS98B-LS98LC-LS108B Traction Shaft)	1A241
Double Cam Lever Assy (LS98B-LS98LC-LS108B-LS108HD Toogle Lever Assembly)	JC2122
Drain Valve (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC1811
Drive Sprocket Assy (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	18C62
Drum (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F111
Elbow (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1J1189
End Plate (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B475
End Plate (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1B677
End Plate (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F103
End Plate (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1303
End Plate (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1304
Female Adapter (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	JU4
Filter Body (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	8J574
Filter Body (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	8J576
Filter Cap (LS98B-LS98LC-LS108B-LS108HD Accumulator Assembly)	JC2593
Filter Element Kit (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	PX468
Filter Element Kit (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	PX316
Flexball (LS98B-LS98LC-LS108B-LS108HD, <i>long</i> , Boom Hoist Shaft, Independent Swing)	1X3306
Flexball (LS98B-LS98LC-LS108B-LS108HD, <i>short</i> , Boom Hoist Shaft, Independent Swing)	1X3304
Flexible Coupling (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1A350
Gear Z=72 (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	1E36-
Gear Z=77 (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C141
Gear Z=81 (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1C12
Gear Z=81 (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1C12
Gear Z=81 (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C140
Gear (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1S1
Gear (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Shaft)	1C324
Gear (LS98B-LS98LC-LS108B-LS108HD Independent Swing Shaft)	1F26
Gear (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1S1
Gear (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C323
Gear (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F70
Gear (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1F23
Gear (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1F189
Gear (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1C323
Gear (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G7-1G39
Gear (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G6
Gear (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G37
Gear Z=68 (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	1E4-
Gear Z=68 (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Shaft)	1G4

Gear Z=72 (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Shaft)	91C6
Grease Fitting (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double 1/8")	1X820
Grease Fitting (LS98B-LS98LC-LS108B-LS108HD Sealed Lower Track Roller)	1X813
Grease Fitting (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1X812
Hand Throttle Assy. (LS98B-LS98LC-LS108B-LS108HD Swing Brake control)	1H164
Head Valve (LS98B-LS98LC-LS108B-LS108HD Control Valves)	JC1493
Head Valve Detention (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1C1490
Hose Assy. (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1J1200
Housing (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	1J674
Hub with Bushing (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1A1478
Hydraulic Cylinder (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Brake)	1J2205
Jam Nut (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C227
Jam Nut (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double 3/4")	1X185
Jam Nut (LS98B-LS98LC-LS108B Tread Sprocket Unit)	91A350C
Jaw Clutch (LS98B-LS98LC-LS108B Traction Shaft)	1A1364
Jaw Clutch (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1F13
Kit (LS 78 Cylinder)	PX190
Kit (LS 78 Cylinder)	PX191
Kit (LS 78 Cylinder)	PX254
Kit (LS 78 Cylinder)	PX256
Kit (LS 78 Cylinder)	PX301
Kit OR (LS98-LS108-LS108HD-LS118 Cylinder)	PX309
Kit OR (LS98-LS108-LS118-LS108HD Cylinder)	PX323
Kit OR (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	PX176-177
Kit OR (LS98B-LS98LC-LS108B-LS78-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	PX308
Kit OR (LS98B-LS98LC-LS108B-LS78-LS108HD Control Valves)	PX182
Lagging (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1D135
Lagging (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1D135
Lagging w/ Brake Drum (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	91E4-
Lever (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C182
Lever (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C181
Lever (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	1H164
Lever (LS98B-LS98LC-LS108B-LS108HD Swing Brake Control)	1J1943
Lever (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F156
Lever (LS98B-LS98LC-LS108B-LS108HD Toogle Lever Assembly)	JC2131
Lever (LS98B-LS98LC-LS108B-LS108HD Toogle Lever Assembly)	12J227
Lining (LS98B-LS98LC-LS108B-LS108HD, lower part , Swing Brake)	1F77
Lining (LS98B-LS98LC-LS108B-LS108HD, upper part , Swing Brake)	1F105
Lining and River Kit (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft)	PX195
Lining Kit (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	PX193
Lining Kit (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	PX383
Locknut (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	ST1004
Locknut (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1X1848
Lockwasher (LS98B-LS98LC-LS108B-LS108HD Sealed Lower Track Roller)	1X31
Lockwasher (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1X32

Lockwasher (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1X31
Lockwasher (LS98B-LS98LC-LS108B Take-up Roller)	1A2698
Lockwasher (LS98B-LS98LC-LS108B-LS108HD Track Carrier Roller)	1X31
Lower Frame Cylinder (LS98B-LS98LC-LS108B Traction Shaft)	1A240
Lower Retractable Frame Assembly (LS98B-LS98LC-LS108B Tread Sprocket Unit)	98A3508D
Male Adapter (LS98B-LS98LC-LS108B Clutch Rotating Joint & Clutch Cylinder Assembly)	JU5
Nut (LS98B-LS98LC-LS108B-LS108HD Sealed Lower Track Roller 5/8")	1X154
Nut (LS98B-LS98LC-LS108B-LS108HD Swing Brake 3/4")	1X199
Nut (LS98B-LS98LC-LS108B-LS108HD Track Carrier Roller)	1X154
O Ring (LS318 Boom Brake Cylinder)	20C46
O Ring (LS318 Clutch Cylinder 1 ¾)	JC4247
O Ring (LS318 Clutch Cylinder 2 ¼)	1X24433
O Ring (LS318 Cylinder 2 ¼)	1C279
O Ring (LS318 Cylinder)	1X2822
O Ring (LS318 Gear)	1C194
O Ring (LS318 Gear)	9J440
O Ring (LS318 Lower Frame Steering Cylinder)	FC192
O Ring (LS318 Powerpack)	PX185
O Ring (LS318 U-Cup Steering Cylinder)	21A133
O Ring (LS318 Valves)	3J791
O Ring (LS318 Valves)	PX182
O Ring (LS318)	PX309
O Ring (LS98-LS108-LS78-LS108HD Arm Brake Cylinder)	1J1919
O Ring (LS98-LS108-LS78-LS108HD Powerpack)	PX185
O Ring (LS98B-LS98LC-LS108B-LS78-LS108HD Control Valves)	PX182
O Ring (LS98B-LS98LC-LS108B-LS78-LS108HD Swing Brake Cylinder)	8F302
Oil Filter (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	8J574
Oil Seal (LS138 Bell)	AC81
Oil Seal (LS138 Clutch Cylinder)	1X2527
Oil Seal (LS138 Right Bell, Front Shaft Whinch)	1X3389
Oil Seal (LS138 <i>Right</i> Reserve Shaft Assembly, 181.2x152.3x16)	9F034
Oil Seal (LS138 Swing Brake Cylinder)	1X2433
Oil Seal (LS138 Swing Reserve Shaft)	CC150
Oil Seal (LS138 Swing Reserve Shaft)	FM3
Oil Seal (LS138 Swing Reserve Shaft)	9F42
Oil Seal (LS318 165x127x16)	9G206
Oil Seal (LS318 206.5x168x19)	1X2354
Oil Seal (LS318 Bearing Conical couple, Vertical Travel Shaft 298.6x266.7x15.87)	21G5
Oil Seal (LS318 Bearing Rotating Joint)	PX176 - PX177
Oil Seal (LS318 Bearing Vertical Shaft, 174.77x142.9x15.87)	1X3230
Oil Seal (LS318 Pinion Primary Shaft)	1X2907
Oil Seal (LS78 Chain Cases)	8H743
Oil Seal (LS78 Clutch Bell)	1X2066
Oil Seal (LS78 Swing Brake Shaft)	1X2098
Oil Seal (LS78 Swing Shaft)	1X1990
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	AC81
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	AC81
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Independent Swing Brake Shaft)	FM3

Oil Seal (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Brake Shaft)	1X1501
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Shaft)	AC81
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Independent Swing Shaft)	FM3
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	AC81
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	18H131
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1X1666
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	AC81
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Sealed Lower Track Roller)	1X3360
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1X1137
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	CR17
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Swing Shaft , conical couple)	1X1666
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1X1743
Oil Seal (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1X1461
Oil Seal Cases (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	18H131
Pawl IS-UC (LS98B-LS98LC-LS108B-LS108HD Swing Lock)	1J1544
Pedal (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	JT326
Pedal lock (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	JC4277
Pin (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C357
Pin (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	1J675
Pin (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	1D20
Pin (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F93
Pin (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F133
Pin (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F162
Pin (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F83
Pin (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1A736
Pin (LS98B-LS98LC-LS108B-LS108HD Tread Sprocket Unit)	98A3508B
Pin (LS98B-LS98LC-LS108B-LS108HD, Roll Pin , Boom Hoist Brake)	1X2933
Pinion (LS98B-LS98LC-LS108B-LS108HD Independent Swing Shaft)	1F164
Pinion (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1C271
Pinion (LS98B-LS98LC-LS108B-LS108HD, Primary Pinion , Reduction Shaft)	1C22
Piston (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Brake)	1J2204
Piston (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	1C289
Piston (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	8F300
Piston Rod (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C35
Poppet (LS98B-LS98LC-LS108B-LS108HD Unloader Valve Assembly)	JC1811
Pressure accumulator (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC2598
Relief Valve (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC1795
Relief Valve (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC1683
Retaining Ring 125 (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1X2118
Retaining Ring 135 (LS98B-LS98LC-LS108B-LS108HD Conical Roller Assembly - Double)	1X2118
Rod (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F160
Rod End (LS98B-LS98LC-LS108B-LS108HD Swing Lock)	1J212
Roller (LS98B-LS98LC-LS108B-LS108HD Track Carrier Roller)	1A3
Roller Bracket (LS98B-LS98LC-LS108B Track Carrier Roller)	91A127

Roller w/ Bushing (LS98B-LS98LC-LS108B-LS108HD Sealed Lower Track Roller)	1A1543
Roller w/ Bushing (LS98B-LS98LC-LS108B Take-up Roller)	1A2699
Rotating Joint (LS98B-LS98LC-LS108B Clutch & Rotating Joint)	1J673
Rotating Joint (LS98B-LS98LC-LS108B Clutch Rotating Joint & Clutch Cylinder Assembly)	1J673
Rotating Joint Adapter Assy. (LS98B-LS98LC-LS108B Clutch & Rotating Joint)	1J1454
Rotor (LS98B-LS98LC-LS108B Clutch Rotating Joint & Clutch Cylinder Assembly)	JC675
Screw (LS98B-LS98LC-LS108B Control Valves)	1X627
Seat (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Brake)	1J1897
Security valve (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC2766
Shaft (LS108HD Reduction Shaft)	1C393
Shaft (LS118 Sealed Lower Track Roller)	1A360
Shaft (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Shaft, Independent Swing)	1E3-
Shaft (LS98B-LS98LC-LS108B-LS108HD <i>clutch</i> , Reduction Shaft)	3H1230
Shaft (LS98B-LS98LC-LS108B Conical Roller Assembly - Double)	1B1034
Shaft (LS98B-LS98LC-LS108B <i>equalizer</i> , Conical Roller Assembly - Double)	1B1029
Shaft (LS98B-LS98LC-LS108B-LS108HD Front Drum)	1D7
Shaft (LS98B-LS98LC-LS108B-LS108HD Independent Swing Reserve Shaft)	1E3- 1C4
Shaft (LS98B-LS98LC-LS108B-LS108HD <i>outer</i> , Traction Shaft)	91A745
Shaft (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	91D72
Shaft (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1C393
Shaft (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C4
Shaft (LS98B-LS98LC-LS108B Sealed Lower Track Roller)	1A360
Shaft (LS98B-LS98LC-LS108B-LS108HD <i>short</i> , Vertical Travel Shaft)	1G4
Shaft (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F93
Shaft (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F196
Shaft (LS98B-LS98LC-LS108B-LS108HD Swing Lock)	1J51
Shaft (LS98B-LS98LC-LS108B-LS108HD Swing Lock)	1J1545
Shaft (LS98B-LS98LC-LS108B-LS108HD Take-up Roller)	1A156
Shaft (LS98B-LS98LC-LS108B-LS108HD Track Carrier Roller)	1A311
Shaft (LS98B-LS98LC-LS108B Traction Shaft)	1A159
Shaft (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1495
Shaft (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1F8-1F20
Shaft (LS98B-LS98LC-LS108B-LS108HD Vertical Travel Shaft)	1G5
Shaft (LS98B-LS98LC-LS108B-LS108HD <i>w, spacer</i> , Independent Swing Shaft)	1F197
Shaft Keeper (LS98B-LS98LC-LS108B Sealed Lower Track Roller)	1A248
Shaft (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1C148
Shaft , (LS98B-LS98LC-LS108B <i>short</i> , Traction Shaft)	1A160
Shift Collar (LS98B-LS98LC-LS108B Traction Shaft)	1A3826
Shim (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F104
Shim (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1305
Shim (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1343
Shim (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1344
Shim (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1310
Shim (LS98B-LS98LC-LS108B-LS108HD, <i>Half Shim</i> , Conical Roller Assembly - Double)	1B316
Shim (LS98B-LS98LC-LS108B-LS108HD, <i>Half Shim</i> , Conical Roller Assembly - Double)	1B151
Shim (LS98B-LS98LC-LS108B-LS108HD, <i>Plastic Shim</i> , Conical Roller Assembly - Double)	1B793

Shim (LS98B-LS98LC-LS108B-LS108HD, <i>Plastic Shim</i> , Conical Roller Assembly - Double)	1B794
Shim (LS98B-LS98LC-LS108B-LS108HD, <i>Plastic Shim</i> , Conical Roller Assembly - Double)	1B795
Shoe and Lining Assy. (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C176 + PX193
Shoe and Lining Kit Assy. (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	9C311 +PX418
Single Cam Lever Assy (LS98B-LS98LC-LS108B-LS108HD Toogle Lever Assembly)	JC123
Sleeve (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1A338
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1X2781
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1C353
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1X1355
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1C393
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1X2781
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1X1355
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	DC221
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	FC237
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	GC132
Snap Ring (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	FC125
Spacer (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1J575
Spacer (LS98B-LS98LC-LS108B-LS108HD Front Drum Shaft)	1C7
Spacer (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1D25
Spacer (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1C27
Spacer (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1C13
Spacer (LS98B-LS98LC-LS108B-LS108HD Rear Drum Shaft)	1D27
Spacer (LS98B-LS98LC-LS108B-LS108HD Reserve Shaft Assembly)	1C55
Spacer (LS98B-LS98LC-LS108B-LS108HD Swing Brake Shaft)	1F96
Spacer (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F82
Spider with Pins (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C75
Spider with Pins (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C74
Spring (LS98B-LS98LC-LS108B-LS108HD Boom Hoist Brake)	1J1896
Spring (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C43
Spring (LS98B-LS98LC-LS108B-LS108HD Clutch & Rotating Joint)	1C179
Spring (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	JC2529
Spring (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1J576
Spring (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1J575
Spring (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1J663
Spring (LS98B-LS98LC-LS108B-LS108HD Control Valves)	1J577
Spring (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	1D92
Spring (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	JC1545
Spring (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	JC1874
Spring (LS98B-LS98LC-LS108B-LS108HD Swing Brake Control)	JC1543
Spring (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F159
Spring Cap (LS98B-LS98LC-LS108B-LS108HD Control Valves)	JC1491
Spring Seal (LS98B-LS98LC-LS108B-LS108HD Oil Filter Assembly)	8J586
Spring Seat (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F157
Sprocket (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1H1855
Sprocket (LS98B-LS98LC-LS108B-LS108HD Reduction Shaft)	1H1344
Sprocket (LS98B-LS98LC-LS108B-LS108HD Traction Shaft)	1A1477

Steering Band (LS98B-LS98LC-LS108B Traction Shaft. 2 pieces; every piece complete of Lining)	1A270
Sump Tank Assy (LS98B-LS98LC-LS108B-LS108HD Hydraulic Power Assembly)	JC3895
Swing Brake (LS 108-LS108HD)	1F77 + 1F72
Thrust Washer (LS108 Take-up Roller)	1A2698
Thrust Washer (LS108 Tread Sprocket Unit)	1A1308
Thrust Washer (LS118 Lower Track Roller)	1A4578
Thrust Washer (LS98B-LS98LC-LS108B-LS108HD Independent Swing Shaft)	1F15
Thrust Washer (LS98B-LS98LC-LS108B Sealed Lower Track Roller, 5/16" A.R)	1A359
Thrust Washer (LS98B-LS98LC-LS108B Traction Shaft)	1A153
Thrust Washer (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1308
Thrust Washer (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1295
Thrust Washer (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1287
Thrust Washer (LS98B-LS98LC-LS108B Tread Sprocket Unit)	1A1295
Thrust Washer (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1F3
Thrust Washer (LS98B-LS98LC-LS108B-LS108HD Vertical Center Drive Shaft)	1F11
Toogle Lever Assembly (LS98B-LS98LC-LS108B-LS108HD Toogle Lever Assembly)	1J2776
Washer (LS98B-LS98LC-LS108B-LS108HD Accumulator Assembly)	JC2706
Washer (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	JC1674
Washer (LS98B-LS98LC-LS108B Sealed Lower Track Roller)	91A1976
Washer (LS98B-LS98LC-LS108B Track Carrier Roller)	98A1976
Washer (LS98B-LS98LC-LS108B Traction Shaft)	1A371
Winch Brake Band w/Lining (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	1D811
Wiper Ring (LS98B-LS98LC-LS108B-LS108HD Clutch Rotating Joint & Clutch Cylinder Assembly)	PX323
Yoke End (LS98B-LS98LC-LS108B-LS108HD Front & Rear Drum Brake)	JC646
Yoke End (LS98B-LS98LC-LS108B-LS108HD Swing Brake)	1F175
Yoke End (LS98B-LS98LC-LS108B-LS108HD Swing Lock)	1J214